




PULP CARE 300 Control Unit

OPERATION

On power-up, Pulpcare 300 will do the self-test, if no error is detected and lid is closed, the unit is now ready to start the automatic operation. The outputs are activated as programmed with setting.

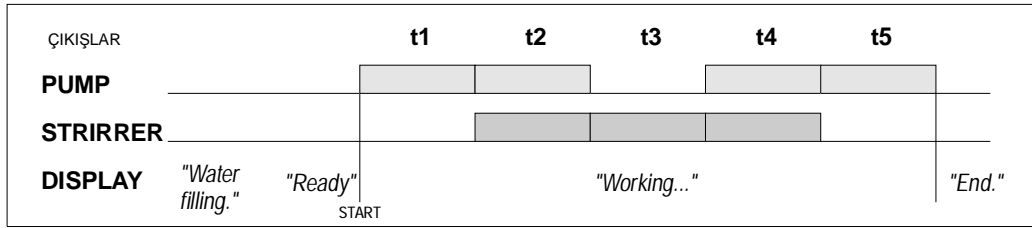

OPERATION STOP

- If STOP button is pressed, operation stops. Press START to continue from the moment at which stop is pressed.
- If STOP is pressed once again, the operation will be cancelled totally.
- If the lid is opened during the operation, operation stops. Lid is closed and START is pressed than, the operation will continue from the stop moment.

SET-UP

Switch off the unit, Press UP and keep pressing while switching on, wait approx. 10 secs. and enter settings for t1, t2, t3, t4, t5 and hyst. time.

LANGUAGE SELECT


Switch off the unit, Press DOWN and keep pressing while the switching on, wait approx. 10 secs. and select the language; TR=Turkish, EN=English, FR=French, DE=Germany.
Note : UP/DOWN buttons are secured buttons.

EX-FACTORY SETTINGS

Switch off the unit, Press STOP and keep pressing while switching on the unit, wait approx. 10 secs. display shows "Fab.Set"

[t1=10sec, t2=75sec, t3=10sec, t4=20sec, t5=10sec, Hys=3sec, Language=TR]

ELECTRICAL CONNECTIONS

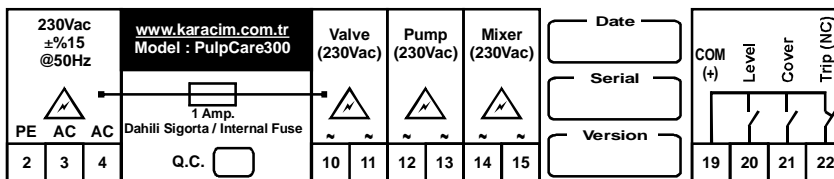

ERROR MESSAGES

If "THERMAL TRIP" is displayed, the motor is over loaded, service is needed.